 


Ozarks Environmental and Water Resources Institute (OEWRI)
Missouri State University (MSU)

 
Standard Operating Procedure for:

Operation of the SonTek/YSI FlowTracker Handheld ADV (Acoustic Doppler Velocimeter)

Ozarks Environmental and Water Resources Institute
Missouri State University
Roy Blunt Hall 305
901 South National Avenue
Springfield, MO 65897

Prepared by: 
OEWRI Assistant Director

Date: 9/11/2026

Approved by: 
OEWRI Director

Date: 9/14/2026

September 2026



Table of Contents

Identification of the Method	3
Applicable matrix of matrices	3
Detection Limit	3
Scope of the Method	3
Summary of the Method	3
Definitions	3
Interferences	4
Health and Safety	4
Personnel Qualifications.....	4
Equipment and Supplies	4
Quality Control	5
Calibration and Standardization	6
Procedure.....	6
A. Office Diagnostics.....	6
B. Field Diagnostics	6
C. Field Procedure	7
Pollution Prevention	9
Data Acquisition, Calculations, and Reporting	9
Computer Hardware and Software	9
References.....	9
Tables, Diagrams, and Flowcharts	9

Identification of the Method

Operation of the SonTek/YSI FlowTracker Handheld Acoustic Doppler Velocimeter (ADV) to directly measure velocity and calculate discharge in a stream.

Applicable Matrix of Matrices

This instrument measures water velocity in streams and open channels.

Detection Limit

The shallow-water 2-axis (2D) probe measures velocity in depths as shallow as 2 cm. It can measure velocities between ± 0.001 m/s to 4.5 m/s with a resolution of 0.0001 m/s and accuracy of ± 0.001 m/s.

Scope of the Method

This standard operating procedure provides Ozarks Environmental and Water Resources (OEWR) field and laboratory personnel with guidance on the procedure for office diagnostic, field diagnostic, and field operating procedures of the SonTek/YSI FlowTracker Handheld ADV which measures velocity and calculates discharge.

Summary of the Method

The SonTek/YSI FlowTracker Handheld ADV accurately and precisely measures water velocity and computes automatic discharge using acoustic Doppler technology and USGS/ISO methods. Simple, pre-measurement diagnostics should be performed prior to leaving the office, and field diagnostics should be performed prior to taking measurements at a site. Velocity measurements are recorded at stations along a tapeline pulled perpendicular to the streamflow. The velocimeter is then placed perpendicular to the tape line and velocity is measured using one of three methods appropriate for the stream. Mean velocity, station discharge, and total discharge are calculated and the FlowTracker handheld controller stores the information in separate files that can later be downloaded to a computer and imported into MS Excel.

Definitions

1. Probe: Contains the acoustic transmitter, acoustic receivers, and temperature sensor.
2. Transmitter: Generates a short pulse of sound concentrated in a 6 mm diameter beam.
3. Receivers: Are mounted on arms from the central probe head and are focused on a common sample volume taken at a fixed distance of 10 cm from the arms.

4. Sample volume: The physical location of the water velocity measurement.
5. Temperature sensor: Internally mounted in the probe head and automatically collect temperature data.
6. Signal-to-noise ratio (SNR): The ratio of the received acoustic signal strength to the ambient noise level (dB).
7. Averaging time: Data recording frequency of the instrument that is user-specified and ranges from 10 to 1000 seconds.

Interferences

An improperly calibrated instrument can lead to erroneous results. See the manufacturer's instruction manual (SonTek/YSI, 2005) for proper calibration procedures and see the **Procedures** section for performance check procedures.

Health and Safety

1. When wading in streams where water depths may be 1 meter deep or more, wear a life preserver and/or remove hip boots or chest waders.
2. When walking through densely vegetated areas along streams, be sure to look for and avoid toxic plants like poison ivy. Be sure to wear appropriate insect repellent and protective clothing for protection from mosquitoes, chiggers, and ticks. In addition, probe areas in your path with a walking stick to warn and disperse venomous snakes like the cottonmouth and copperhead which may inhabit riparian areas.
3. Be sure to clean up with bacteria disinfectant soap and water after wading in streams. This is particularly important for streams that drain livestock areas, sewage treatment plant effluents, and other obvious pollution sources. Under no circumstances should you drink the water from any stream.

Personnel Qualifications

This procedure will be followed by OEWRI field and laboratory personnel who have received appropriate training and have field experience regarding instrument setup, data collection, and interpretation.

Equipment and Supplies

1. Field Book and Pen
2. SonTek/YSI FlowTracker Handheld ADV: Probe, probe cable, probe mounting bracket, handheld controller, and carrying case.
3. 30-meter tape
4. Two surveying pins or stakes to hold ends of tape
5. Wading rod (short rod = feet, long rod = meters)
6. At least eight AA batteries

Quality Control

1. **Signal to noise ratio (SNR):** SNR is the most important measure of QC from this instrument. SNR is the ratio of the strength of the reflected signal to the ambient noise level. Under the best conditions, the SNR should be > 10 dB. However, the FlowTracker can operate reliably with an SNR as low as 3 dB. Low SNR values can occur in very clear water which can occur in Ozark streams in baseflow conditions. When the SNR is below 4 dB, the FlowTracker will display a warning. If this occurs the operator will take the reading again after they go upstream and kick up the substrate to increase the suspended sediment passing the cross-section.
2. **Standard error of velocity:** This is a direct measure of the accuracy of the mean velocity measurement. Standard error of velocity is calculated by dividing the standard deviation of the one-second samples by the square root of the number of samples. This gives an idea of the variability of the measurements in respect to the mean velocity.
3. **Boundary adjustment:** Acoustic interference from underwater objects can skew velocity measurements. This is especially true in shallow water conditions where reflections can come from the channel bed. The FlowTracker automatically makes adjustments to avoid interferences and reports these as boundary adjustments and reports these with one of the following values:
 - a. 0 (Best) - No adjustments necessary with little to no impact on system performance.
 - b. 1 (Good) - Minor adjustments necessary with moderate impact on system performance.
 - c. 2 (Fair) - Large adjustments necessary with notable impact on system performance.
 - d. 3 (Poor) - Major adjustments necessary with significant impact on system performance. The FlowTracker will still provide good performance for lower flows.
4. **Spike filtering:** Data spikes are filtered from dataset and not used to calculate mean velocity when both of the following two conditions are met:
 - a. Velocity measurement is at least 3 standard deviations from the mean velocity, and
 - b. Velocity measurement is at least 3 cm/s (0.1 ft/s) from the mean velocityTypically, < 2 spikes occur in a 60 second reading.
5. **Flow angle:** The Flowtracker should always be held perpendicular to the tape line when collecting discharge measurements. A flow angle of 0° indicates the

flow direction is perpendicular to the tape line. In the field, good measurements will have variability in the flow angle, but all angles should be $< 20^\circ$.

Calibration and Standardization

The receivers, transmitter, and temperature sensor are factory calibrated and do not require regular calibration. The velocimeter performance can be checked with the ADVCheck software, see procedures below.

Procedure

A. Office Diagnostics

1. Prior to making the first velocity measurement, verify the velocimeter performance using the ADVCheck software. This procedure should be done prior to extended periods of use or once a week for daily use periods.
2. Connect the data recorder to a computer with the provided cable.
3. Place the probe in a small bucket of water.
4. Open the FlowTracker software.
5. Click "ADVCheck".
6. Click "Connect" and "Go!".
7. The software will go through a series of diagnostic procedures and display the results in graphical form. Check the operator's manual (SonTek/YSI, 2005) for "normal" curve results and troubleshooting when these results deviate from the typical conditions.

B. Field Diagnostics

The following diagnostics should be checked at each site prior to the discharge measurement. These functions are available under the System Functions Menu on the data recorder.

1. Vent the Handheld Controller - The handheld controller should be vented prior to data collection. To vent, loosen the dummy cap on the external communication connector a few turns, wait a few seconds, and tighten the cap.
2. Recorder status - The data recorder can hold up to 32 files. Make sure there is enough room on the recorder to store the site discharge information.
3. Temperature data - Temperature is an important component of the velocity estimate. Check that the meter is recording an appropriate temperature for the specific conditions in the field.
4. Battery data - This function tells the operator how much battery life is remaining. Fully charged alkaline batteries should have a life span of 25

hours. The FlowTracker requires eight AA batteries and a set of new batteries should be in the case.

5. Display raw data - Set the probe in the water and check the SNR value. It should be > 10 dB, but the FlowTracker can operate properly with an SNR as low as 3 dB in very clear water.
6. System clock - Verify the clock is set correctly.

C. Field Procedure

Once the field diagnostics have been performed, the field procedure for collecting discharge measurements is as follows:

1. Select a site with: minimal flow obstructions upstream and downstream, without areas of near-zero velocity or eddies, where velocities and depths are within the range for accurate results, and one which can be safely navigable.
2. Pull a tape tight across the stream and anchor it on both side with stakes or surveyor's pins. The zero reading on the tape should be staked on the left bank of the channel and tape readings increase toward the right bank. The left and right sides of the channel are determined by facing downstream.
3. The width of the water surface is divided into a minimum of 10 stations at equal intervals across the stream.
4. After cross sections are divided into stations and field diagnostics have been performed, place the X-axis of the velocimeter perpendicular to the tape line (Figure 1).
5. The horizontal location on the tape, water depth, and flow velocity is recorded at the appropriate depths dependent on the method (single, two-point, or three-point) chosen. Descriptions of each method are detailed here:
6. Start the velocity measurements: Turn the controller on.
7. Press the Enter key to display the Main Menu.
8. Press 1 to enter the Setup Parameters Menu. Review the current settings and change the values to meet your requirements. When using the short wading rod, "ENGLISH" units should be selected. When using the tall wading rod, "METRIC" units should be used. Averaging time should always be "60 s". Mode should be "DISCHARGE". Press 9 when finished.
9. Press 3 to Start Data Run and display the Data File Name Menu.
10. Enter the site information: All sites will have a unique three-digit site id, this is followed by the date using a six digit numbers month/day/year. For example, M04121807 would be site M-04 visited on December 18, 2007.
11. Press 9 to accept the name and enter the Starting Gauge Menu.
12. Press the Next Station button when you are done.
 - a. Collect station data: In the Starting Edge screen, enter the location, depth, correction factor and starting edge using the marked buttons on

the keypad. Press Next Station to continue. Enter the location, depth, and the method of measuring velocity. When the station information is complete and the probe is at the correct depth and orientation, press the Measure Button. An updating display will show the measured velocity and SNR values. Keep the probe as steady as possible. n completion of the average time, a summary will be displayed.

- b. **Single Point Method** - This is the standard method that will be used the majority of the time. This method measures velocity at 0.6 times the water depth. Wading rods available for use are preset to hold the probe at the appropriate location for the single point method based on water depth. This method should be used when the station water depth is <0.46 meters (1.5 feet).
 - c. **Two-Point Method** - The two-point method measures velocity at 0.2 and 0.8 times the water depth. This method will be used when the water depth exceeds 0.46 meters (1.5 feet).
 - d. **Three-Point Method** - This method is reserved for non-standard profiles where one of the following situations occur:
 - i. Near surface velocity is < near bottom velocity,
 - ii. Near surface is 2 times higher than near bottom velocity, or
 - iii. Near surface and near bottom velocities are in opposite directions.
13. Press 1 to accept and go to the next station or 2 to repeat this measurement. Repeat these steps for each station.
14. Ending the measurement: When the final edge section data is collected, press End Section. The ending-edge information will be displayed. Enter the information for this edge.
15. Velocities for any one station should not exceed 10% of the total flow. The FlowTracker software identifies stations that exceed 10% of the total flow. Extra stations should be added to the profile between the high velocity stations until all stations have <10% of the total flow.
16. Reviewing data: Press the Previous Station and Next Station buttons to review completed stations.
17. Discharge calculation: Press Calc Discharge to compute the total cross-sectional discharge for all completed stations. Check the calculated discharge validity by using common sense and visual interpretation of the cross-sectional area of the channel. Review data for errors if the discharge does not match estimated discharge for the cross section.
18. Save data: Press 9 to return to the Main Menu to make sure that the data has been saved.

Pollution Prevention

All waste from these procedures shall be collected and disposed of according to existing waste policies within the MSU College of Natural and Applied Sciences.

Data Acquisition, Calculations, and Reporting

Field Notes – In a field book, record the stage from a staff gage, discharge, mean velocity, cross-sectional area, and width for back-up purposes.

Data Download

1. Connect the recorder to a computer with the provided cable.
2. Open “FlowTracker” software.
3. Click “Recorder”.
4. Click “Connect”.
5. Select data files in the “Recorder File Listing” window.
6. Save file to appropriate files on computer.
7. Click “Download”.

Export Files

1. Connect the recorder to a computer with the provided cable.
2. Open “FlowTracker” software.
3. Click “Data Export”.
4. Click “Open File”.
5. Select data file for the site of interest and open.
6. Select “Discharge Data” from the output variables.
7. Save file to appropriate files on computer.
8. Click “Export Selected Variables”.
9. “FlowTracker” software saves a discharge file with the extension .dis that can be opened in a spreadsheet software. This file contains discharge, mean velocity, cross-sectional area, and width of the site selected.

Computer Hardware and Software

Requires SonTek FlowTracker software.

References

SonTek/YSI Inc. October 2005. FlowTracker Handheld ADV Operation Manual (Firmware Version 2.6; Software Version 1.30).

Tables, Diagrams, and Flowcharts

Figures illustrating the instrumentation and procedures are shown below.

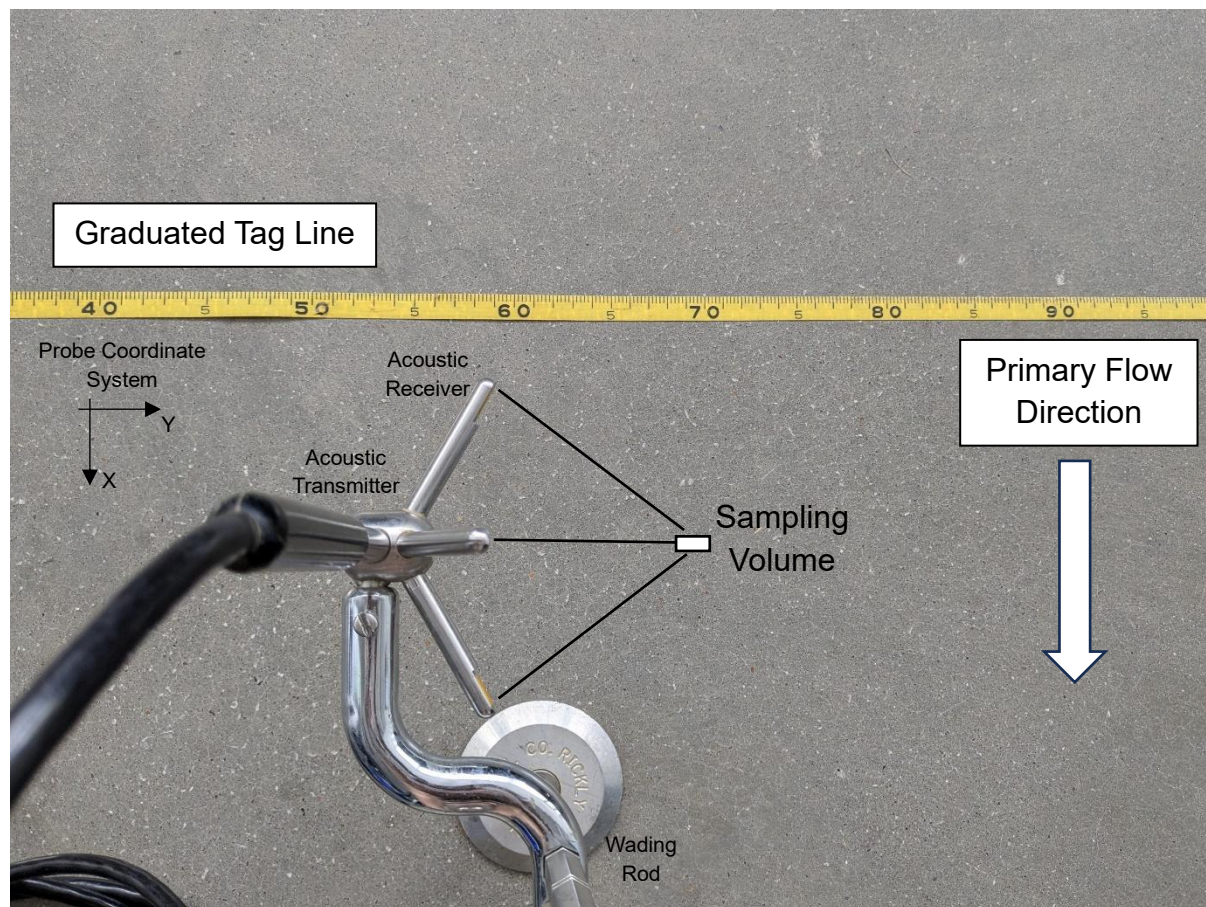


Figure 1. Velocimeter placement in relationship to flow direction and tapeline.